

ESPOIR

Y U M E

UNRIVALED LUXURY.  
UNMATCHED COMFORT.  
UNBELIEVABLE RESULTS.

---

Our YUME Espoir is here to elevate services and help stylists, salon owners, and their guests realize their desires. Customers can recline fully into relaxation with the Espoir's plush exterior, supportive leg rest and a cushioned pillow that cradles their neck for pure comfort. Stylists are able to enjoy world class functionality with simple features such as adjusting seat positioning with the touch of a button, the choice to stand or sit during services and being able perform off an accompanying stool which provides ergonomically designed support to work with stylists rather than against them. Owners will enjoy the menu expansion and client retention the YUME Espoir brings, in addition to the upscale feel that it provides.







# YUME HEAD SPA

WHERE BEAUTY MEETS HEALTH

---

The YUME Head Spa service delves beyond the surface, providing clients with a true mind, body and soul experience to salon visits. Not only will your guests notice an immediate improvement in the health of their hair but they will enjoy physical and mental relief in the process. This unparalleled experience can sooth symptoms of migraine headaches to jaw tension providing a spa atmosphere that will give clients a meditative appointment.







# BEYOND YOUR WILDEST DREAMS

---

"YUME" is loosely translated to "dream," and it's easy to see why. The supporting neck rest gives your guests a soft place to land, freeing them from exposure to the surface of the hard porcelain bowl. It's full reclining feature ensures complete relaxation and a shampoo experience like no other. Gorgeously comforting to the eye, and even more so to the body, the Espoir's plush form and compact versatility ensures there's a dream fit for every client, space, and technician.

- Fully-reclined lay flat seats let customers relax
- Neck cushion devices maintain comfort even during lengthy treatments
- Sitting styles let staff provide treatments in comfort



## STYLISH FORM

### STYLISH FORM WITH A SENSE OF UNITY

---

The upscale look and sleek body of the YUME Espoir ensures that your chair will look as well as it functions. The cohesive aesthetic of the shampoo basin, bowl, and chair along with it's accompanying accessories create fluidity in today's modern salons.

\*Shown with premium line - premium line not sold in U.S.A.





# BACKWASH SHAMPOO

## Quiet water drainage employing ventilating valves

The drainage pipe in the basin is equipped with ventilating valves, which reduces the unpleasant noise when water drains from the basin.


## Easy-to-use faucet fittings layout

The showerhead is located at the center back of the basin, while the water tap and temperature control knob are located with bilateral symmetry inside the basin. With adjustable fine temperature settings during head spa services, this layout is unique to YUME. \*Water valve layout may differ depending on region.


### Adjustable Shower Head



### Rotation plug that rotates to open/close

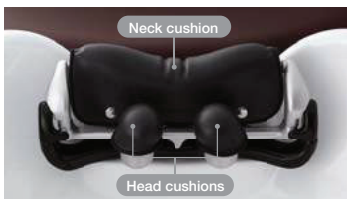


### [SIDE VIEW OF THE NECK SUPPORT]

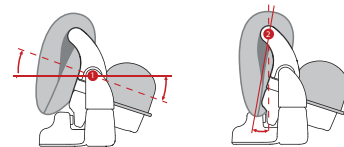

Two head cushions and one neck cushion supports the head in three different areas creating the perfect balance for long period of treatments.

2-axis design adjusts to the contours of the head and helps every customer maintain ultimate comfort.

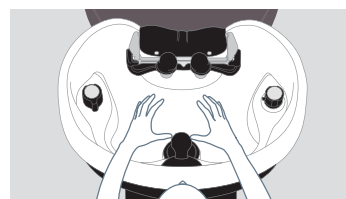

Both shampoo and head spa services can be provided from the back in a seating style. Neck height is fixed at 31.5" which is ideal for stylists for a better seating posture.



Height of the rear edge of the basin is made low so that stylist's elbows will not hit the basin during services.



# YUME ESPOIR

---

Turn your shampoo bowl into a multi-function area with the YUME Shampoo Unit and create new income possibilities for your salon. With a motorized lift system, your technician can stand and shampoo or remain seated to perform an extended spa for hair treatment. Your customer relaxes in the lounge chair while the head is supported ergonomically





## YUME STOOL

Take shampoo services to the next level with an operator-conscious seating solution – the Yume Stool. Ergonomically designed to reduce strain placed on high-pressure areas, the stool is the key to a consistently comfortable experience; and it's also equipped with an air-assisted height adjustment, tilt-able seat, fixed base, and flexible stem system for optimal operator comfort.



Lifting stroke: 8.11"



Max Swing Angle: 8°

## SPA MIST II

Vibrant colors, lasting curls, and stronger wave length – the Spa Mist II enhances salon treatments by generating a fine mist of microscopic water particles. It gently opens up the hair's cuticle layer for deep conditioning of the hair and scalp. The Spa Mist II's versatility brings similar benefits for manicures, hand treatments, and much more.





# YUME ESPOIR GALLERY

Some models shown may not be available in the United States.






# SPECIFICATIONS


[Overall layout diagram] (Unit : inch [mm])

Unit: Backwash Type Chair: Fixed Leg Rest Seat: Basic

Top view

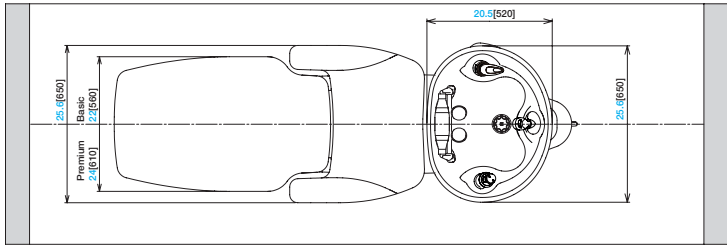


Side view

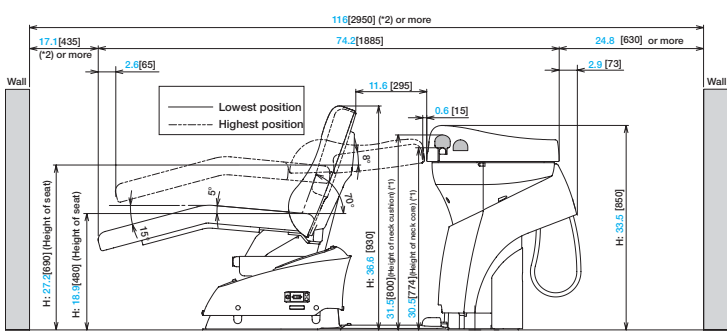


Unit: Backwash type Chair: Adjustable Leg Rest Seat: Basic

Top view

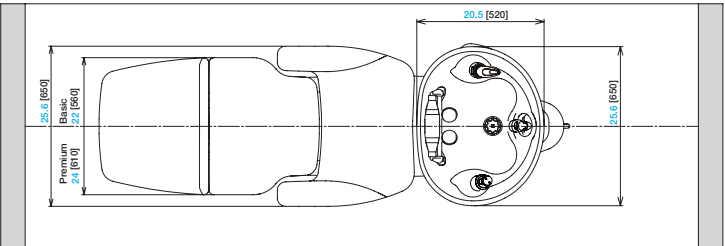


Side view

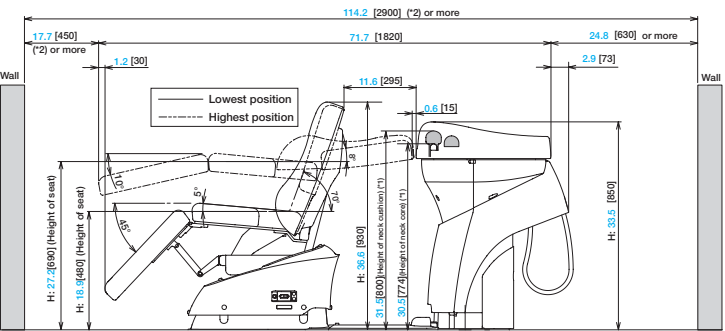

\*1 The dimensions listed above may vary slightly from product to product.

\*2 Ensure that there is ample space surrounding the seat for extremely tall customers or if the surrounding area is used as a passageway.

	Height of neck cushion	Height of neck core
Backwash Type (AY-EXESYM)	31.5 [800]	30.5 [774]

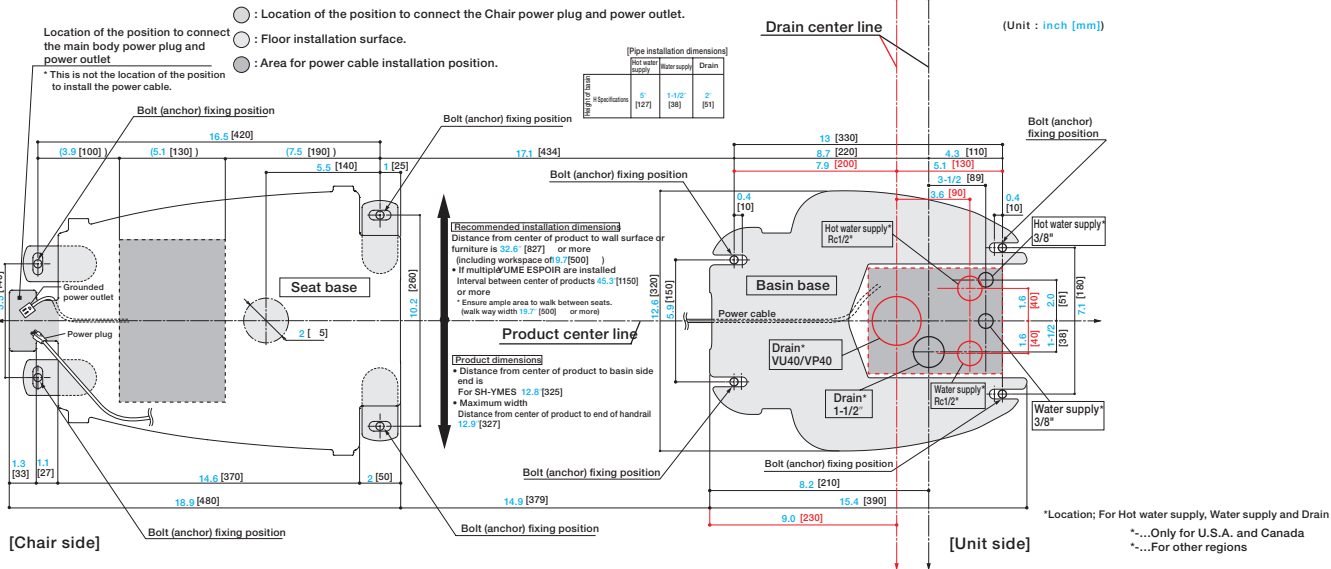

Dimensions	Backwash Basin and Chair with Fixed Leg Rest; Backwash Basin and Chair with Adjustable Leg Rest;	W650 x D1958 x H930 mm (W25.6 x D77.1 x H36.6 inches) W650 x D1893 x H930 mm (W25.6 x D74.6 x H36.6 inches)
Weight (Unit Only)	Backwash Basin and Chair with Fixed Leg Rest; Backwash Basin and Chair with Adjustable Leg Rest;	96.5KGS (212.7LBS) 97KGS (213.8LBS)
Power Consumption	AC110V: 50/60HZ, 4.3/2.8A AC120V: 50/60HZ, 5.7/3.4A AC220V: 50/60HZ, 1.7/1.6A AC230V: 50/60HZ, 1.9/1.6A AC240V: 50/60HZ, 2.1/1.7A	

\*When purchasing one of the products, please read the enclosed instruction manual carefully before use to ensure proper operation.

\*The product requires specialized installation. Please consult the store where you purchased the product. Incorrect installation of the product can result in accidents. Please be sure to install the production in strict accordance with the installation manual.

YUME ESPOIR