

TAKARA BELMONT

Don't just shampoo their hair — give them luxurious comfort.

Japanese quality and features based on our extensive research provide a better shampoo experience for you and your customers.

Shiatsu is a Japanese massage technique that stimulates key pressure points on the body to improve blood flow and relieve muscle tension. Now, the benefits of *shiatsu* are coming to the hair salon, in the form of *shiatsu* shampoo. Skilled stylists stimulate acupressure points on the head while providing customers with a comfortable shampoo experience.

Takara Belmont gave the RSIII a host of superb design features to make *shiatsu* shampoo a reality. A conveniently shaped bowl, a snug-fitting neck cushion, thermo-mixed warm water, and a hush-quiet drain. It all adds up to a uniquely relaxing *shiatsu* shampoo—not just for the customer, but for you too.



Bowl design ideal for shiatsu shampoo—reason 1

To improve access to a customer's nape a key comfort spot—the back of the bowl is lower than the front. This design promotes more effective shampooing and *shiatsu* massaging.



Bowl design ideal for shiatsu shampoo — reason 2

With a larger and deeper bowl than on previous models and shampoo fixtures that leave plenty of space in the center, the RSIII makes the stylist's job easier than ever. Takara Belmont's high-tech neck cushion provides comfort for customers of all sizes

This durable, soap-resistant neck cushion features 1.5 times as much of Takara's special cushioning gel as on previous models. Securely fastened to the bowl to prevent sliding, it offers comfort for necks of any size. With minimal neck strain, customers can enjoy enhanced relaxation—even during long shampoo sessions.



Compact, low-splash, aerating shower head comes as standard equipment

Shower head design fits more snugly in the hand. Provides a low-splash foaming shower, for a gentle yet robust *shiatsu* shampoo. *Note: Not available on USA and Canadian models.*



Tightly sealed drain opening prevents hair from getting caught

A new drain opening closes and opens with a single touch and allows you to offer a wide range of shampooing techniques to please customers. And because it's designed to prevent hair from getting caught in it, you can enjoy stress-free shampooing.



Comes standard with thermostat — essential for a comfortable shampoo

A built-in thermostat ensures that customer comfort comes first. The thermostat prevents sudden changes in temperature and keeps water consistently warm.

Note: Not available on USA and Canadian models.



Tilting bowl adjusts to customer height

From its basic vertical position, the bowl can be tilted down 12 degrees or up 8 degrees to accommodate each individual customer.



Upgrade Option



Adjustable shower head adds to the *shiatsu* shampoo experience

The hand shower allows one-touch switching between the low-splash foaming mode and the shower mode. You're in control, as you can quickly and easily switch between the high-pressure shower mode and the gentle low-splash foaming mode.

Note : Availability of this option depends on country.



Model Line-up





A balance of comfort and ease of use. A new standard for back-wash shampoo units.



Photo: AY-P069X/AY-S195X



Photo: AY-PRICBNL5 on SP-YA Base

Quality with a satisfying sense of comfort. Stylish high-end design for relaxing and unwinding.







This model features an oversized seat, with a solid-feeling, durable design.

RS Luxis









Luxis Chair



Photo: AY-P070X/AY-LUX-KP2

Options



EX-MST Ergonomic features provide comfort even when doing long treatments.

M-STOOL



Leg rest cover



EA-COVCL



For RS ELITE only EA-VCBSHORT

For RS PRIME only EA-VCBLITE

Floor step


Backrest cover



EA-FS1


Dimensions (mm inch)

<rs Prime>

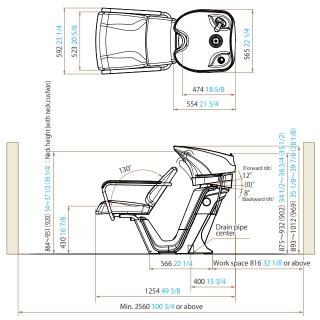

Note:Figures in parentheses are when the bowl movement angle is 0°.

$\langle rs Elite \rangle$

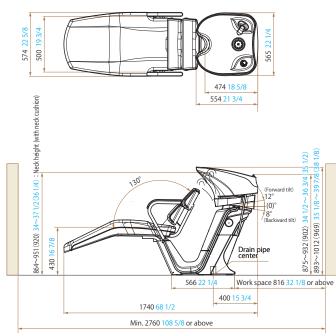

Note:Figures in parentheses are when the bowl movement angle is 0°.

TAKARA BELMONT GROUP

JAPAN	TAKARA BELMONT CORPORATION, OSAKA HEADQUARTERS Tel: +81-6-6213-5945 E-mail: beauty@takara-net.com Web: www.takarabelmont.co.jp
U.S.A.	TAKARA BELMONT USA, INC. Tel: +1-732-469-5000 E-mail: webmaster@takarabelmont.com Web: www.takarabelmont.com
CANADA	TAKARA COMPANY, CANADA, LTD. Tel: +1-905-822-2755 E-mail: tomtraves@takarabelmont.ca Web: www.takarabelmont.ca
BRAZIL	TAKARA BELMONT PARA AMERICA DO SUL INDUSTRIA E COMERCIO DE MOVEIS LTDA. Tel: +55 11 3284 9577 E-mail: takbel@takarabelmont.com.br
U.K.	TAKARA BELMONT (UK) LTD. Tel: +44-20-7515-0333 E-mail: hairdressing@takara.co.uk Web: www.takara.co.uk
GERMANY	TAKARA BELMONT FRANKFURT OFFICE Tel: +49-69-2972-8090 E-mail: info@takara-belmont.de Web: www.takara.co.uk
KOREA	TAKARA BELMONT (KOREA) CORPORATION Tel: +82-2-413-5878 E-mail: info@takarabelmont.co.kr Web: www.takarabelmont.co.kr
TAIWAN	TAKARA BELMONT (TAIWAN) CORPORATION Tel: +886-2-8789-0809 E-mail: takara.twn@msa.hinet.net
CHINA	TAKARA BELMONT SHANGHAI CORPORATION Tel: +86-21-6272-8166 E-mail: xin-li@belmont.jp

Actual color may differ from color in printed catalog.
The manufacturer reserves the right to change models, descriptions, and specifications without prior notice.

8 634 <mark>25</mark> 565 22 1/4 Õ 200 0 474 18 5/8 864~951(920) 34~371/2(361/4): Neck height (with neck cushion) 554 <mark>21 3/4</mark> 8 893~1012 (969) 35 1/8~39 7/8 875~932 (902) 34 1/2~36 3/4 (0) 8 ard tilt) 45818 Drain pipe 566 22 1/4 Work space 816 32 1/8 or above

Note:Figures in parentheses are when the bowl movement angle is 0°.

RS III Wash Unit

Bowl +Post						
Model code	Front p	ost cover color	Shower type			
AY-P069X		Black	Standard foaming			
AY-P070X		White	shower			
AY-P075X		Black	Upgraded adjustable			
AY-P076X		White	shower head			
USA and	AY-P073X	Black				
Canadian models	AY-P074X	White				

1213 47 3/4

Min. 2560 100 3/4 or above

400 15 3/4

Seat Section					
Model name	Model code	Upholstery			
	AY-S195X	NL5 Black			
RS PRIME	AY-S196X	NL1 White			
	AY-S197X	NL23 Rosso Brown			
	AY-S198X	NL24 Dark Brown			
RS LUXIS	AY-LUX-KP1	KP1 Black			
	AY-LUX-KP2	KP2 Brown			
	AY-ELI-SH1	SH1 Black			
	AY-ELI-SH8	SH8 White			
RS ELITE	AY-ELI-SH15	SH15 Ivory			
	AY-ELI-SH24	SH24 Dark Brown			
	AY-ELI-SH26	SH26 Smoky Brown			

TAKARA BELMONT

<rs Luxis>